

CBU Assembly Installation

Type I, Type II, Type III and Type IV

Step 1:

Place Butyl rubber pad P/N 51071 between pedestal and concrete surface.


Step 2:

Install the U.S.P.S furnished hardware 1/2 flatwasher, 1/2 lockwasher & 1/2 -13 UNC Hex. Nut stainless steel (Torque 40" -LB.) (4 PLCS)


Step 3:

Place CBU on pedestal align the holes located in bottom compartments with holes in pedestal. Insert the 3/8 - 16 UNC x 2 1/2 LG carriage bolts (4) intall the tamper proof waasher, 3/8 - UNC S. Stl. HEX. HD. NUT. (Torque nut to 40" LB.)


Item #	Quantity	Part No.	Description
1	1	D-51002-1	Pedestal assembly (Type III, IV)
		D-51102-2	Pedestal assembly (Type I, II)
2	1	B-51071	Pad spacer base
3	4	B-51094	Tamper-proof washer (Stainless Steel)
4	4	B-51118	3/8" - UNC hex flange nut (Stainless Steel)
5	4	Hardware	1/2" -13 UNC hex nut (Stainless Steel)
6	4	Hardware	1/2" Lockwasher (Stainless Steel)
7	4	Hardware	1/2" Flatwasher (Stainless Steel)
8	4	B-51119	3/8" - 16 Unc x 2-1/2" bolt (Stainless Steel)
9	1	D-51001-1	CBU assembly (Type I)
		D-51001-2	CBU assembly (Type II)
		D-51001-3	CBU assembly (Type III)
		D-51001-4	CBU assembly (Type IV)

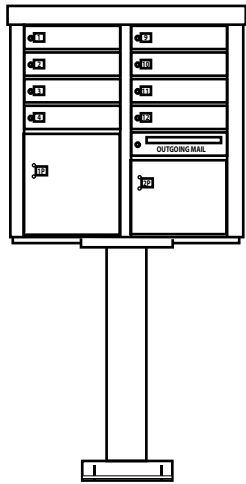

Type I

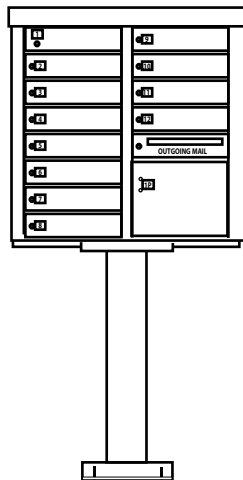

Type II

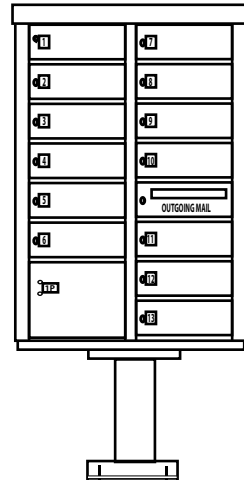

Type IV

